




TECHNICAL BULLETIN

This Technical Bulletin is produced to provide information not contained in the previously published literature from Quietside, or to provide additional information regarding installation practices

ODW & DPW Vertical Venting

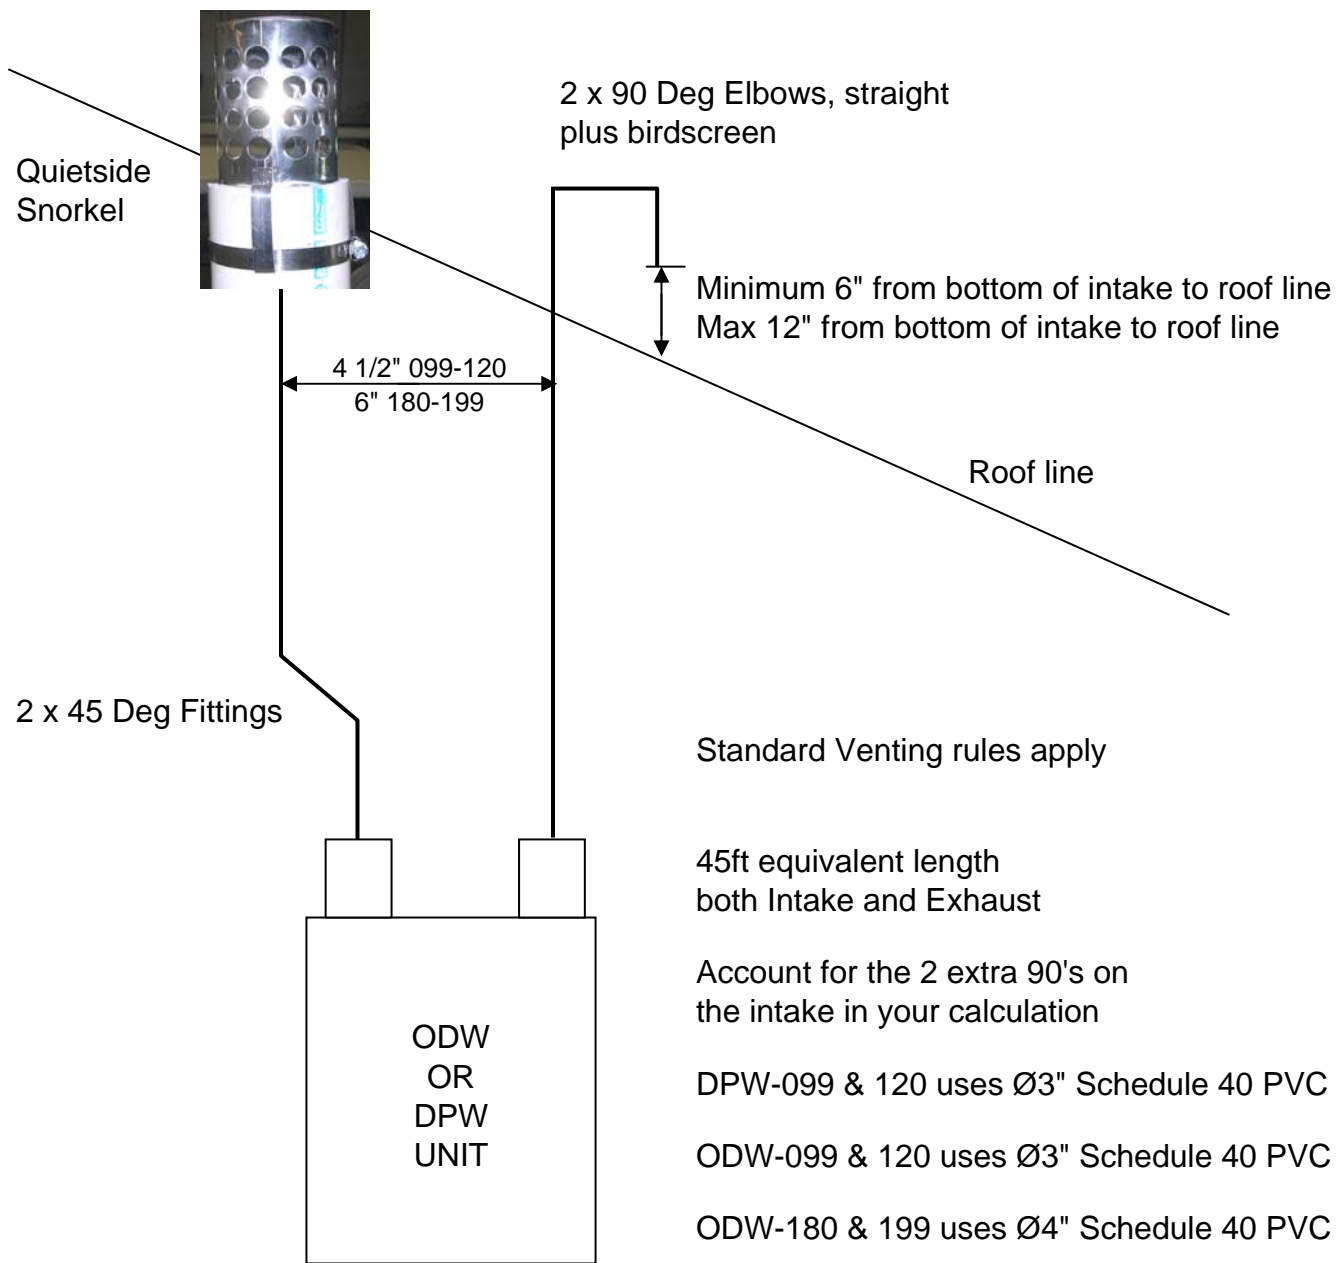

Attach Flue and Intake pipes to unit with PVC Cement approved for this type of application
Attach Vent Termination to Flue Pipe and caulk around joint to ensure seal